

Rev. 03/2020-C2

Manufacturer Name: URIT Medical Electronic Co.,Ltd.
Address: No.D-07 Information Industry District
Hight-Tech Zone,Guilin, Guangxi 541004,P.R.China
Tel: +86(773)2288586 Fax: +86(773)2288560
Web: www.urit.com Email: service@uritest.com



K08B


Ultrasonic Scaler

OPERATION MANUAL

# CONTENTS

Components2
Copyright and Statement3
Overview4
Warning4
Installation and connection5
Preparing for Treatment6
Manual for Wrench6
Setting the ultrasound Power7
Setting the Liquid Flow Rate8
Foot Switch Functions8
End of Treatment9
Cleaning, Disinfecting and Sterilizing9
Cleaning the Unit10
Disinfecting the Circuit11
Maintenance11
Safety Precautions
Storing the Product
Disposal
Warranty14
Accessories14
Contraindication14
VRN Service15
Symbols
Technical Date17
Troubleshooting
EMC Declaration

#### COMPONENTS

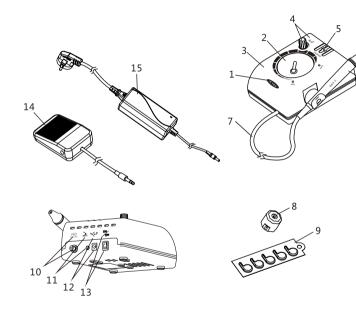

- 1 Model and LOGO
- 2 Vibration intensity knob and icon
- 3 Unit
- 4 Water volume knob and icon
- 5 Power LEDs
- 6 Sealed handpiece
- 7 Sealed cable
- 8 Tip wrench
- 9 Tips
- 10 Fluid circuit connection and icon
- 11 Foot switch connection and icon
- 12 External power supply connection and icon
- 13 Power switch and icon
- 14 Foot switch
- 15 External power supply

### Copyright and statement

Copyright © URIT Medical Electronic Co. Ltd.

Congratulations to become valued customers of URIT Medical Electronie Co. Ltd. Thanks for using K08B Ultrasonic scaler. It will bring you the new experiences and conveniences.

This instruction manual is including the latest information when printing. URIT Medical Electronic Co. Ltd. Reserves the rights to change the design of the equipment, the technique. Fittings the instruction manual and the content of original packing list at any time without notice. If there are some differences between blueprint and real product, take the real product as the norm.

This instruction manual is protected by copyright Law. Without any official authorization, any form of duplication. copy or translated into another language is not allowed.

Read the instruction manual originally delivered with each of the components before using this product and follow the instruction manual to operate. Otherwise, URIT Medical Electronic Co. Ltd. Dose not take any responsibility for any errors and damage of the product because of violation operation.



#### Note:

URIT Medical Electronic Co.,Ltd does not promise any implied guarantee to the product special use for merchantability and applicability.

If you need after-sale service support, please contact with authorization dealer or manufacturer.

#### Overview

1.Structure and composition

K08B ultrasonic scaler is mainly composed of function control circuit, liquid circuit, handle, tip and foot switch (wired).

- 2.Intended use
- a)Removing supra and sub gingival calculus deposits and stains from the teeth.
- b)Periodontal pocket lavage with simultaneous ultrasonic tip movement.
- c)Preparing, cleaning and irrigating root canals.

### Warning

The device is not suitable for use in the presence of flammable anesthetic mixtures with air or with oxygen or nitrous oxide.

The device requires no calibration.


The device is not repairable and contains no user serviceable parts.

No modification of this equipment is allowed. (3rd Edition)

The user must check that the equipment functions safely and see that it is in proper working condition before being used.

The manufacturer does not require such preventive inspections by other persons.

### INSTALLATION AND CONNECTION

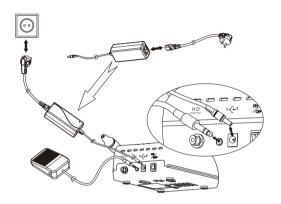



Always check that the unit is installed in a safe and stable position. An eventual fall may suddenly pull on the cord and the handpiece, hurting the patient and the user, and damaging the unit.

Check that the rated voltage of the power supply corresponds to the local line voltage to prevent damaging the unit.

Use the unit only in a FI protected mains supply(FI=Residual current protection).

For USA or Canada: connect only to an Hospital Grade outlet.

4 of 25 5 of 25

### PREPARING FOR TREATMENT

Clean and sterilize the different pieces and accessories of this product beforeeach use. Please refer to the information provided in the operating instructions. Non–sterile pieces and accessories may cause bacterial or viral infections.

Blow dry the connections to remove eventual presence of liquid to ensure a proper electrical contact. Never blow compressed air in the irrigation connections as this will irremediably damage internal parts.

### MANUAL FOR WRENCH

With a special structure design, wrench makes sure that users can handling the tip effectively during Using it, and protects user's hand from hurting in the process of loading and unloading the tip.

Sterilization environment: Temperature:133 $^{\circ}$ C(±2 $^{\circ}$ C), Pressure:193kPa~201kPa, in the steam Steps:


- (1) Align the legs of the wrench to the tip.
- (2)Install he tip: grip the handle, rotate the tip in right-hand wise till the tip does not turn around anymore.
- (3)Unloading the tip: grip handle then rotate the tip in counter-clockwise by wrench to remove it.
- (4)Once after using, please put the wrench into disinfection cabinet to sterilization.



(5)After sterilization, the surface temperature of the wrench is too high to be used again, so users must wait until it is cool down, avoiding hurt.

(6) When not use the wrench, put it at some place that is dry and ventilated, and keep it clean.

### SETTING THE ULTRASOUND POWER

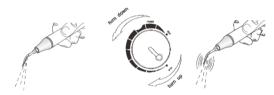

Adjust vibration intensity on-demand, generally, the medium is right, it also can be adjusted in the clinical course according to the sensitivity of patients and the hardness of the dental stone.



Adjust power to the lowest when just turn on the host.

## SETTING THE LIQUID FLOW RATE



Depress the foot switch, and the tip starts vibrating, and then revolve the water volume knob and the water spraying puffs, it will cool down the handle and clean the surface of teeth.

Never work dry to avoid heat damage on the tooth. The tip of the instrument immediately heats up when used dry.




Adjust water volume to larger when just turn on the host.

#### FOOT SWITCH FUNCTIONS



#### **END OF TREATMENT**

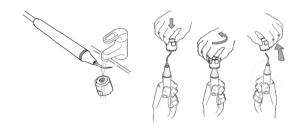

Clean the instrument with running water before sterilization.

Please conform to the recommendations of the "Reprocessing Instructions" manual delivered with your product regarding the procedures of cleaning and sterilization of the components.

### **CLEANING.DISINFECTING AND STERILIZING**

Handpiece and disinfection

Handle disinfection can refer to cleaning, disinfecting and sterilizing instructions, please read the instructions before disinfection, and operate according to the instructions.

Notices

- (1)Remove the tip after working every time.
- (2)Be sure to remove the tip from the handpiece before disinfecting, and avoid mixing it together with other equipment.

(3)In the process of using and disinfection, please feel free to pay attention that the handpiece is with external damages or not. Prohibit from applying and protected oil on the surface of the handpiece.

(4) Prohibit To soak the handpiece into disinfectant, for example iodine, alcohol, glutaraldehyde and so on.

Tip Sterilization

For disinfection methods, please refer to cleaning, disinfecting and sterilizing instructions.

Wrench Sterilization

For disinfection methods, please refer to cleaning, disinfecting and sterilizing instructions.

Wrench and tips Cleaning

For disinfection methods, please refer to cleaning, disinfecting and sterilizing instructions.

Notices

Prohibit to disinfect in the following ways:

- · Put the wrench into boiling solution.
- · Soak the wrench and tips into disinfectant.
- Put the wrench and tips into oven or microwave to bake in high-temperature.



Follow present-day regulations enforced in the country about reprocessing.

### **CLEANING THE UNIT**

Clean the unit only with an alcohol-based, commercially-available, colorless disinfectant (ethanol, isopropanol). The use of scouring powder or an abrasive sponge will damage its surface. The unit is not protected against water spray. It cannot be sterilized.

### DISINFECTING THE CIRCUIT

It is recommended to disinfect the liquid circuit daily.

Disinfection is necessary to reduce crystalline deposits and the number of bacteria in the liquid circuit of the unit; The following procedure achieves a 4 log reduction of target pathogens:

- 1. Make sure the water you are using is distilled (or demineralized) water.
- 2. Remove the handpiece. Revolve the water volume knob to the max point.
- 3. Turn on the scaler and depress the foot switch.
- 4. Allow the disinfecting water to rinse the circuit for 3 to 5 minutes.

### MAINTENANCE



Always use VRN original parts. Using non-original instruments may damage the unit, and practitioner or patient may be injured.

### SAFETY PRECAUTIONS

VRN and the dealer of this product accept no liability for direct or consequential injury or damage resulting from improper use, arising in particular through non-observance of the operating instructions, or improper preparation and maintenance.



Contraindication: ultrasonic oscillations may prevent cardiac pacemakers and defibrillators from functioning properly. Therefore, we recommend that patients with a cardiac pace maker or a defibrillator should not be treated with this product.

Use for the intended purpose only: before using the product, make sure that you have studied the operating instructions. This also applies to any equipment used with this product. Failure to observe the operating instructions may result in the patient or user suffering serious injury or the product.

Risk of explosion: do not use this product in the presence of flammable anaesthetics or gases. This product must be used only by trained and qualified personnel.

Clean and sterilize the different pieces and accessories of this product before each use.

Please refer to the information provided in the operating instructions. Non-sterile pieces and accessories may cause bacterial or viral infections.

This product has been investigated with regard to safety from electrical shock and fire hazard.

ETL(Electrical Testing Laboratories) has not investigated the physiological effects.

Always examine the product for damage before commencing treatment. Damaged accessories or a damaged unit must not be used and must be replaced. Use original VRN spare parts and accessories only.




Have this product exclusively repaired by an approved VRN repair center.

Use exclusively the external power supply delivered with the VRN unit.

Certain types of mobile telecommunication equipment could potentially interfere with this product. The separation distances recommended in the "Electromagnetic compatibility" manual must be taken into account.

### STORING THE PRODUCT

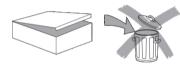



Keep the original packaging until he product is to be disposed of permanently. It can be used for shipping or storing at any time.

Should you wish to put your product out of use for an extended period of time:

- Proceed as described in the "cleaning and Sterilization" chapter.
- · Pack the product and all accessories in the original packaging.

Please refer to the storage and transport conditions in the "Technical data" chapter.

## DISPOSAL

The product must not be discarded in domestic household waste.

Should you wish to definitively dispose of the product, please comply with the regulations which apply in your country.

Waste Electrical and Electronic Equipment belonging to customers located in the European Union may be shipped to VRN for recycling in accordance to the WEEE regulations. The costs of recycling, exclusive of shipping fees, are covered by VRN.

### WARRANTY

Damages due to non-adherence to the operating instructions or wear out of parts are excluded from warranty.



The warranty of your product will be cancelled if you try to open it.

### ACCESSORIES

Accessories are available from VRN or any authorized dealers. Please contact your customer service directly.

### Contraindication

Approval of a suitably qualified medical practitioner should be sort prior to use with haemophiliacs, or pregnant women, or children.

Ultrasonic oscillations may prevent cardiac pacemakers and deabilators. From functioning properly.

Therefore, we recommend that patients with a cardiac pace maker or a deabilator should not be treated with

this product.

Scaling generates an aerosol; patients with high–risk infectious diseases should not be treated as it may put others at risk.

### VRN SERVICE

Should your product need additional servicing or repairs, please send it to your dealer or to an authorized VRN Repair Center.

In the case of non-authorized repairs or damages due to non-adherence to the operating instructions, VRN accepts no liability whatsoever. This will also void the warranty.

It is best t ship your product in the original packaging It protects your product against damage during shipment.



Risk of transmitting microorganisms!

To protect the personnel of the repair center and for safety reasons during transport and shipment, the product and the accessories returned to the factory for repair or revision must be cleaned and sterilized in accordance with the operating manual.

Repair can be refused for When sending your product directly to the approved VRN repair center, please include the name of your dealer. This simplifies processing.

### SYMBOLS

& VRN	Manufacturer's logo	À	Caution! Read the operation instruction		Class II equipment	*	Applied part, type B
	Disposal	*	Manufacturer		Used indoor only	SN	Serial number
135°C <b>\$\$\$</b>	Autoclavable	<u></u>	Storage Humidity	*	Storage Temp	Ť	Keep dry
<b>T</b>	Fragile		Refer to instruction manual/booklet	H <sub>2</sub> O 0.01Mpa-0.5Mpa	Water supply	ON OFF	Power Switch
	Electrical outlet	<b>*</b>	Foot switch connection	<u> </u>	Up	$\square$	Period of use
	Production date	IPX1	Prevent water droplets intrusion				

### TECHNICAL DATA

Description
Models
Classification EN 60601-1

- Applied part, Type B
- IPX0, unit
- IPX1, foot pedal
Not category AP/APG equipment
Classification 93/42 EEC
Operating mode
Power Supply
Adaptor Input
Adaptor Output

- Applied part, Type B
- IPX0, unit
- IPX1, foot pedal
Not category AP/APG equipment
Class II
Continuous operation
100–240 VAC / 50–60Hz
30VDC

K08B

- Class II

30VA~48 VA

45W 30V 2m R5.5-2.5+

External power supply
Ultrasonic specifications:
Maximum output
Water Pressure:
Frequency range
Weight
Dimensions in mm (HxWxD)
Operating conditions

Power consumption

Storage and transport conditions

8 Watts
0.01Mpa~0.5Mpa
25-31kHz
1Kg
270mm × 230mm × 140mm
10 °C to 40 °C
30% to 75% relative humidity
-20°C to 55°C
0% to 90% relative humidity
70kPa to 1 06kPa air pressure

URIT Medical Electronic Co., Ltd.

# TROUBLESHOOTING

Fault	Possible cause	Solutions
The scaling tip doesn't vibrate	The power plug is in loose contact	Make the plug insert to the socket well
and there is no water flowing out when stepping on the foot Switch	The foot pedal is in loose contact (wire foot Switch)	Insert the foot switch to its socket tightly
	The fuse in the main unit is broken	Contact the dealers or us
	The battery for wireless control foot Switch died	Change the new batteries
The scaling tip does not vibrate	The tip is in loose contact	Screw the tip on the handpiece tightly
but there is water flowing out when stepping on the foot Switch	The connect plug between the	Contact the dealer or us
when stepping on the root owner.	handpiece and the circuit board is in loose contact	
	Handpiece problem	Send the handpiece to dealer or us to repair
	Cable problem	Contact the dealer or us
The scaling tip vibrates but there	The water control knob is not on	Turn on the water control knob ( note 1 )
is no spray when stepping on the foot Switch	There is impurity in the electric–magnetic valve	Take the electric–magnetic valve apart or contact the dealer or us
	The water system is blocked	Clean the water pipe by multi–function syringe [note 2]
There is still water flowing out after the power is off	The electric- magnetic valve problem	Contact the dealer or us
The handpiece generates heat	The water control knob is in a low setting	Turn the water control knob to a higher grade [ note 1 ]

Fault	Possible cause	Solutions
The amount of spouting water is too little	The water control knob is in a low setting	Turn the water control knob to a higher grade [ note 1 ]
	The water pressure is not high enough	Make the water pressure higher
	The water system is blocked	Clean thewaterpipe by multi–function syringe [ note 2 ]
The vibration of the tip becomes weak	The tip has not been screwed on to the handpiece tightly	Screw the tip tightly
	The coupling between the handpiece and the cable is not dry	Dry it by the hot air
	The tip is damaged [ note 3 ]	Change the new scaling tip
There is water leaking from the coupling between the handpiece and the cable	The waterproof O-ring is damaged	Change the new waterproof O-ring
The U-file does not vibrate	The screw is loose	Tighten it
	Endochuck is damaged	Change the new endochuck
There is noise coming from the endochuck	The screw is loose	Tighten it



#### Notice:

If the problem still cannot be solved, please contact with local dealer or manufacturer.



[note 1]


Turn the water control knob as symbol shown. It comes to the min, on the contrary direction, it comes to the max.

[note 2]

- 1)Clean the water pipe with the multi-function syringe of the dental unit;
- 2) Disconnect the water pipe from main unit:
- 3) Get through to the power and turn on the power switch;
- 4)Connect the multi-function syringe of dental unit to the water pipe;
- 5)Disassemble the tip or handpiece;
- 6)Step on the foot switch;
- 7)Tun on the switch of the multi-function syringe, press the water into the machine and the impurity blocked in the water pipe can be eliminated.

[note 3]


If the scaling tip has been screwed on tightly and there is fine spray too, the following phenomena show that the scaling tip is damaged:

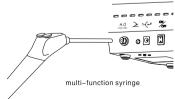

#### TROUBLESHOOTING FOR THE ELECTROMAGNETIC VALVE

If the water is not clean or the electromagnetic valve works too long, there will be the scale and impurity generated on the inside wall and valve plug. It will Cause the water way to be blocked, and could repair as following steps:

- 1)Follow the [note2]
- 2)Uninstall the electromagnetic valve by following steps:
- a) Turn off the power, and unplug the power cable;
- b)Unscrew the cap, and move out the hood of main unit;
- c)Unscrew the cap on the electric magnetic valve, and Uninstall h electromagnetic valve as shown on Figure;
- d)Take out the valve plug. and clean out the impurity on the inside wall;
- e)Install The parts as shown on the figure.
- f)Ensure the water way is working by repeat [note 2].

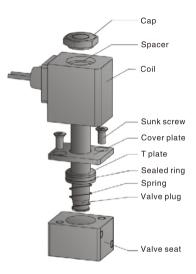

### **EMC DECLARATION**

Guidance and manufacturer's declaration--electromagnetic emissions

The models K08B Dental Ultrasonic SandBlasting Scaler are intended for use in the electromagnetic environment specified below. The customer or the user of the K08B Dental Ultrasonic SandBlasting Scaler should assure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic emissions–guidance
Radiated Emission EN 60601-1-2: 2015 EN 55011:2016+A1:2017	Class B	The models K08B Dental Ultrasonic SandBlasting Scaler use RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
Conducted Emissions EN 60601-1-2: 2015 EN55011:2016+A1:2017	Class B	The models K08B Ultrasonic Periodontal Therapy System are suitable for used in domestic establishment directly connected
Harmonic Current EN 60601-1-2: 2015 EN 61000-3-2:2014	Test configuration and procedure see clause 7.1 of standard EN 61000-3-2: 2014	to a low voltage power supply network which supplies buildings used for domestic purposes
Voltage Fluctuations/ Flicker Emissions EN 60601-1-2: 2015 EN 61000-3-3:2014	Test configuration and procedure see clause 5 of standard EN 61000–3–3: 2013	

### Guidance and Manufacturer's Declaration—Electromagnetic Immunity

Guidance and manufacturer's declaration—electromagnetic immunity

The models K08B Ultrasonic Periodontal Therapy System are intended for use in the electromagnetic environment specified below. The customer or the user of the K08B Ultrasonic Periodontal Therapy System should assure that it is used in such an environment.

Immunity Test	Compliance	Electromagnetic emissions–guidance
Electrostatic Discharge EN60601-1-2:2015 EN61000-4-2:2009	± 15kV for air discharge ± 8kV contact discharge	Floors should be wood, concrete or ceramic tile. If floors are covers with synthetic material, the relative humidity should be at least 30%.
Electrical Fast Transient/Burst	±2kV a.cpwoer lines	Main power quality should be that of a typical commercial or hospital environment.
Surge Test EN60601-1-2:2015 EN61000-4-5:2014 ± 1kV a.c pwoer line(s) to line(s)		Main power quality should be that of a typical commercial or hospital environment.

Immunity Test	Compliance	Electromagnetic emissions–guidance
Conducted Disturbance Snducedby Radio–frequeng Fields	comply with the requirments of clanse 8.9 of EN60601–1–1–2: 2015 at immunity test levels of 3Vrms and 6Vrms over the frequency range beginning at the start frequency and extending to 80MHz	For AC power input lines: EUT is placed on an insulating support of 0.1m high abovea ground re-rerence plane. It must be 0.3m awaythe CDN(coupling and decoupling network) of whitch the bottom is made of metaillic mtaerial and placed above the groundreference plane shall be between 30 and 50mm(where possible). The disturbance signal amplifiled by amplifieris injected to EUT through CDN. For Signal Line and Control Line: EUT is placed on an insulating support above a groundreferrence plane. The EM camp is directly placed on the ground reference plane with its metallic bottom contacting the plane. Gables between EUT and auxiliary equipment are put through the EM clamp. The disturbance signal amplified by amplifier is injected to EUT through EM clamp. Record any perfomance degradation of the EUT during the testand judge the test result according to performance criterion.
Voltage Dips and Interruptiongs	100%/10ms,20ms 30%/500 ms	EUT isconnected to the simulator according to the test photo. When conducting this, the power supply shall be set at the minimum and maximum rated input voltages and test voltage changes shall be step changes at the phaseangle of 0°,45°,90°,135°, 180°,225°,270°and315°.

Immunity Test Compliance Electromagnetic emissions-		Electromagnetic emissions-guidance	
Radiated,Radio-frequency,electromagnetic field	comply with the requiments of clanse 8.9of EN60601-1-2:2015 at immunity test levels	EUT and its auxiliary instrument are placed on a turntable which is 0.8 meter above ground. Trans—mitting antenna mounted on an antenna mast is	